

Connector	Description	RS422 Uart Mode	RS232 Uart Mode	RS422 Non Uart	RS232 Non Uart
J1	RS232 serial conn.		Use		Use
J2	RS422 serial conn.	Use		Use	
J3	Data Surge Suppressor Present	Use		Use	
J4	Data Surge Suppressor Present	Use		Use	
J5	Data Surge Suppressor Present		Use		Use
J6	Data Surge Suppressor Present		Use		Use
J7	Data Surge Suppressor Present	Use		Use	
J8	Data Surge Suppressor Present		Use		Use
J9	A17				
J10	A16				
J11	A15				
J12	Receive input select	1-2	5-6	2-4 and 5-6	4-6 and 1-2
J13	Send data out select	1-2	5-6	2-4 and 5-6	4-6 and 1-2
J14	Reset Select	2-3	2-3	1-2	1-2